



Get started with a Playaway and an FM transmitter.

1 Plug the KM18 FM transmitter into your vehicle's cigarette lighter socket.

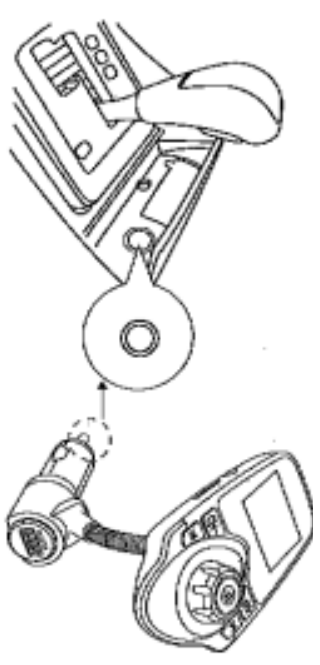

2 Turn on the FM radio on your car stereo system and tune to an unoccupied frequency (you should hear white noise) from **88.1 to 107.9MHZ**. Then press [CH-] or [CH+] on the transmitter until the transmitting frequency matches the frequency your car stereo is tuned to.

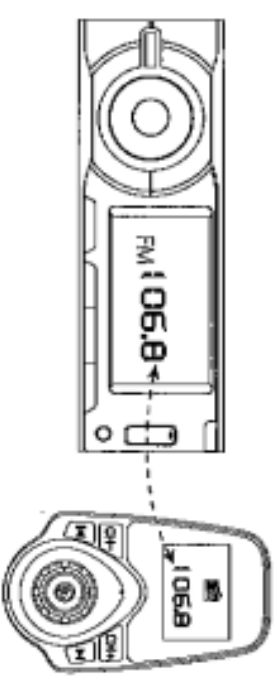

3 Use the audio (AUX) cable to connect your Playaway to the transmitter. Your book is ready to play!



To start, pause, and skip, use the Playaway buttons. To adjust the volume on the transmitter, rotate the center button.

If it is not connected, try turning your car off and back on. **If you experience noise or static**, please confirm that the FM frequency of the car stereo system and the FM transmitter is exactly matched. If not, you need to readjust the FM frequency. Or, you may need to select another radio frequency. **Please note: Library staff are not able to help set up transmitters in your car.**